

Item number: **KFT.10.057.30001/B**Revision: **00** • Date: **07 - 2026****PRO side carrier** ~ 1.5 h.EASY      DIFFICULT

ENGLISH Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words **DANGER**, **WARNING** or **CAUTION** are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

PREPARATION: Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK: After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG
Ernteweg 7-10
35282 Rauschenberg
Germany



 info@sw-motech.com
 www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:

www.sw-motech.com




Use thread locker: Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.



Tighten/note the tightening torque information:

Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).


4	1  M6 x 30; DIN 912 SC.ST.06.030.02.912.088  2/2	2  ø 6.4; DIN 125 US.ST.064.02.125  2/2	3  Ø 15 / ø 6,4 / h 9 DB.ST.0150.0064.0090.02  2/2			
5	4  MSM.00.KFT.005R.11  1/1	5  MSM.00.KFT.005L.11  1/1	6  M8 x 25; DIN 912 SC.ST.08.025.02.912.088  4/4			
6	7  KFT.10.057.001R.11  1/1	8  KFT.10.057.001L.11  1/1	9  M8 x 75; DIN 6912 SC.ST.08.075.48.6912.088  2/2	10  ø 8,4; DIN 125 US.ST.084.02.125  2/2	11  Ø 14 / ø 8,4 / h 37 DB.ST.0140.0084.0370.48  2/2	12  M8 x 75; DIN 7991 SC.ST.08.075.02.7991.088  2/2
	13  Ø 20 / ø 8,4 / h 51 DB.ST.0200.0084.0510.48  2/2	14  MSM.00.KFT.004.11  2/2	15  M8 x 50; DIN 7991 SC.ST.08.050.02.7991.088  2/2	16  Ø 16 / ø 8,4 / h 25 DB.ST.0160.0084.0250.48  2/2		
7	17  KFT.10.057.971.01.11  1/1	18  KFT.10.057.972.01.11  1/1	19  MSM.00.KFT.001.11  1/1	20  KFT.00.152.SV.8  1/1		

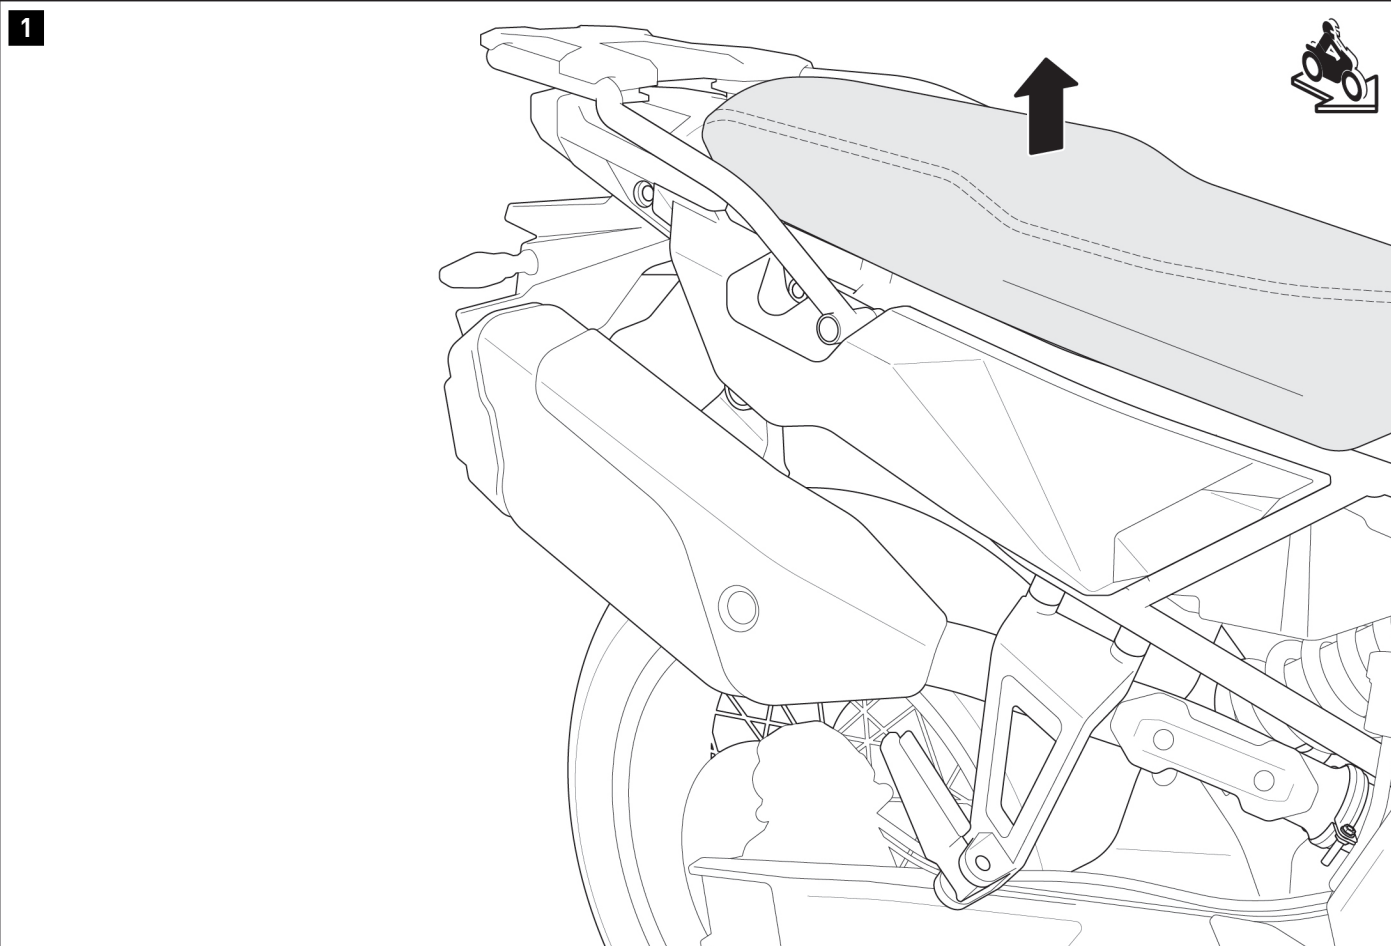

⚠ WARNING: Always wear eye and hand protection!
⚠ WARNING: Always use suitable tools!


Remove the passenger seat from the vehicle.



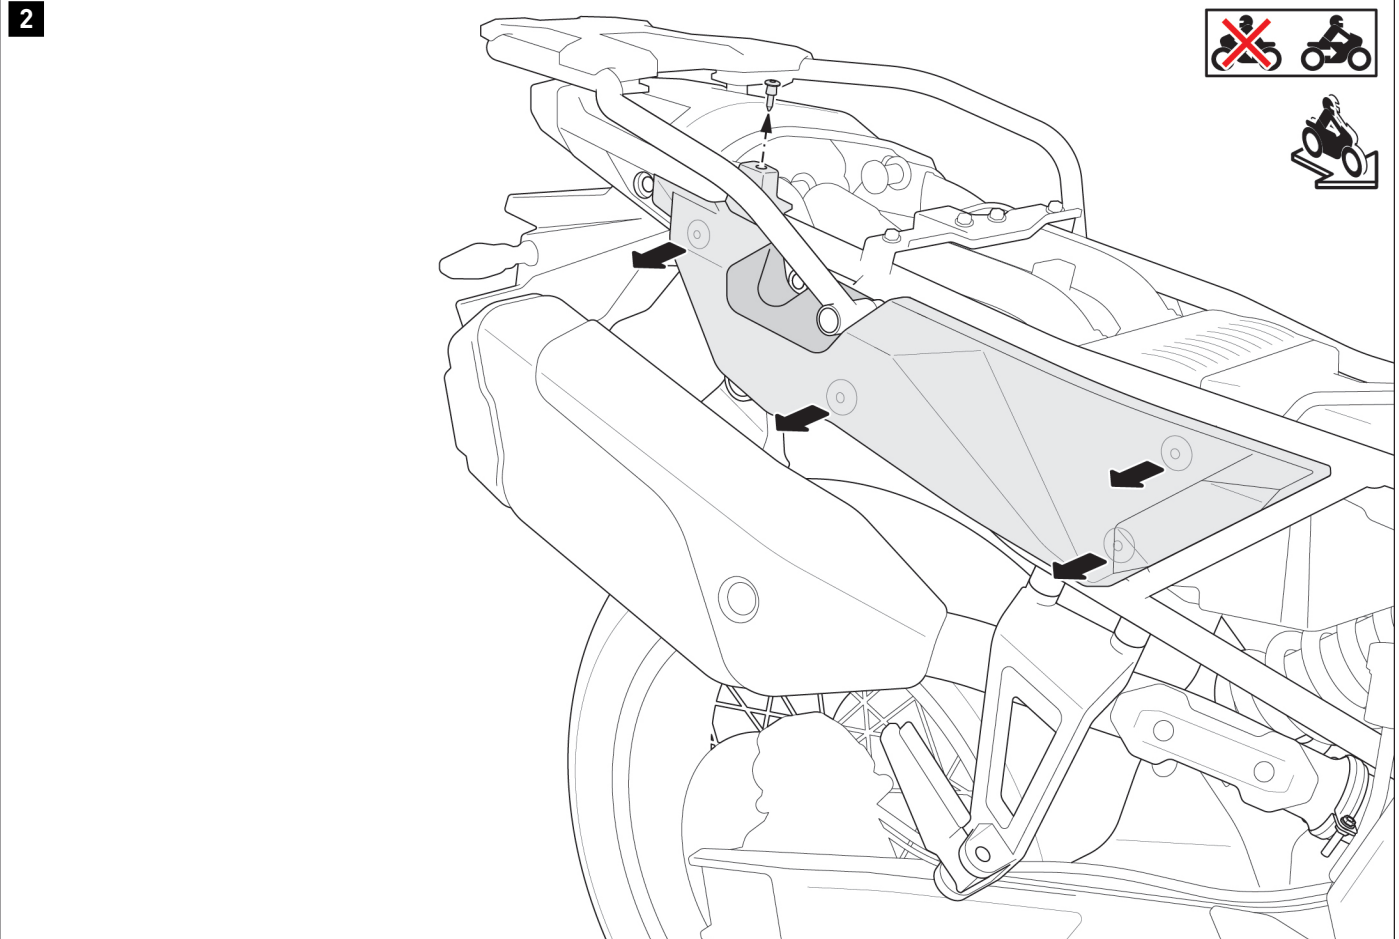


Remove the marked plastic dowels from the rear panel on the **right side of the vehicle**. Carefully pull the rear panels out of the four anchor points.

3

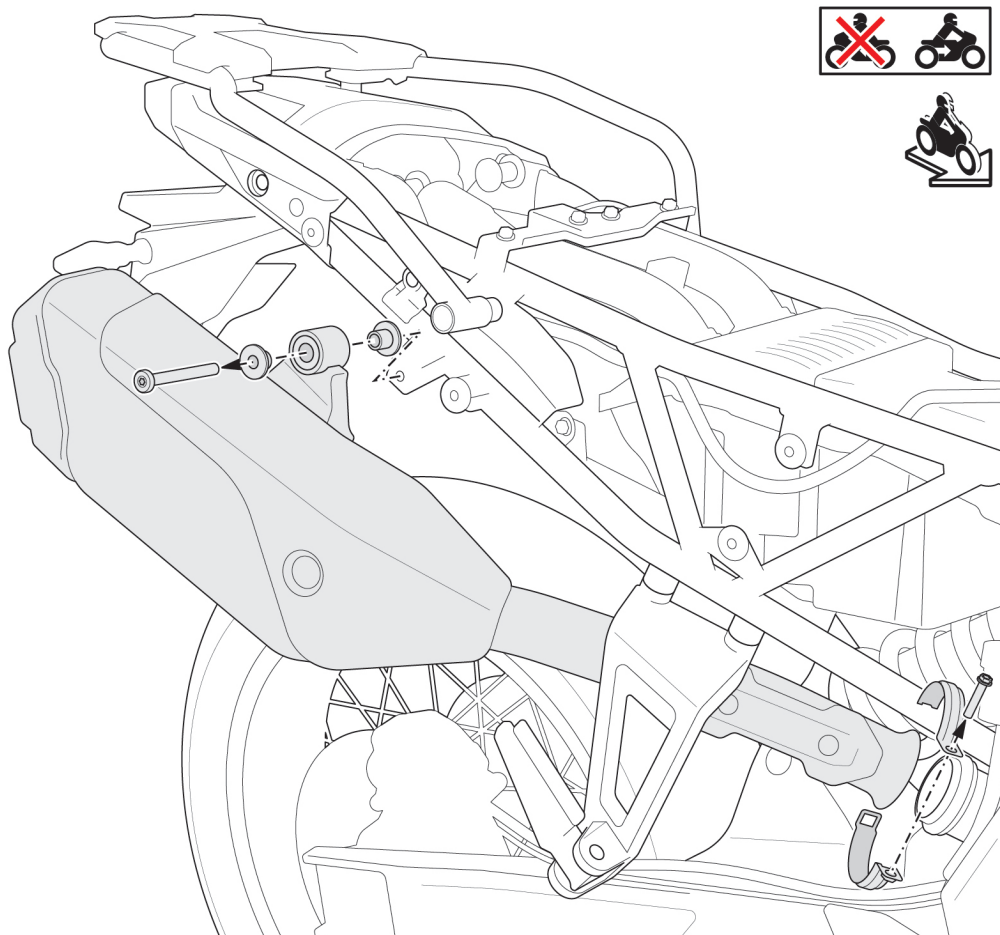

⚠ WARNING: Ensure the exhaust system has cooled down completely before dismantling!

Loosen the indicated screws and remove the exhaust system's muffler from the vehicle.

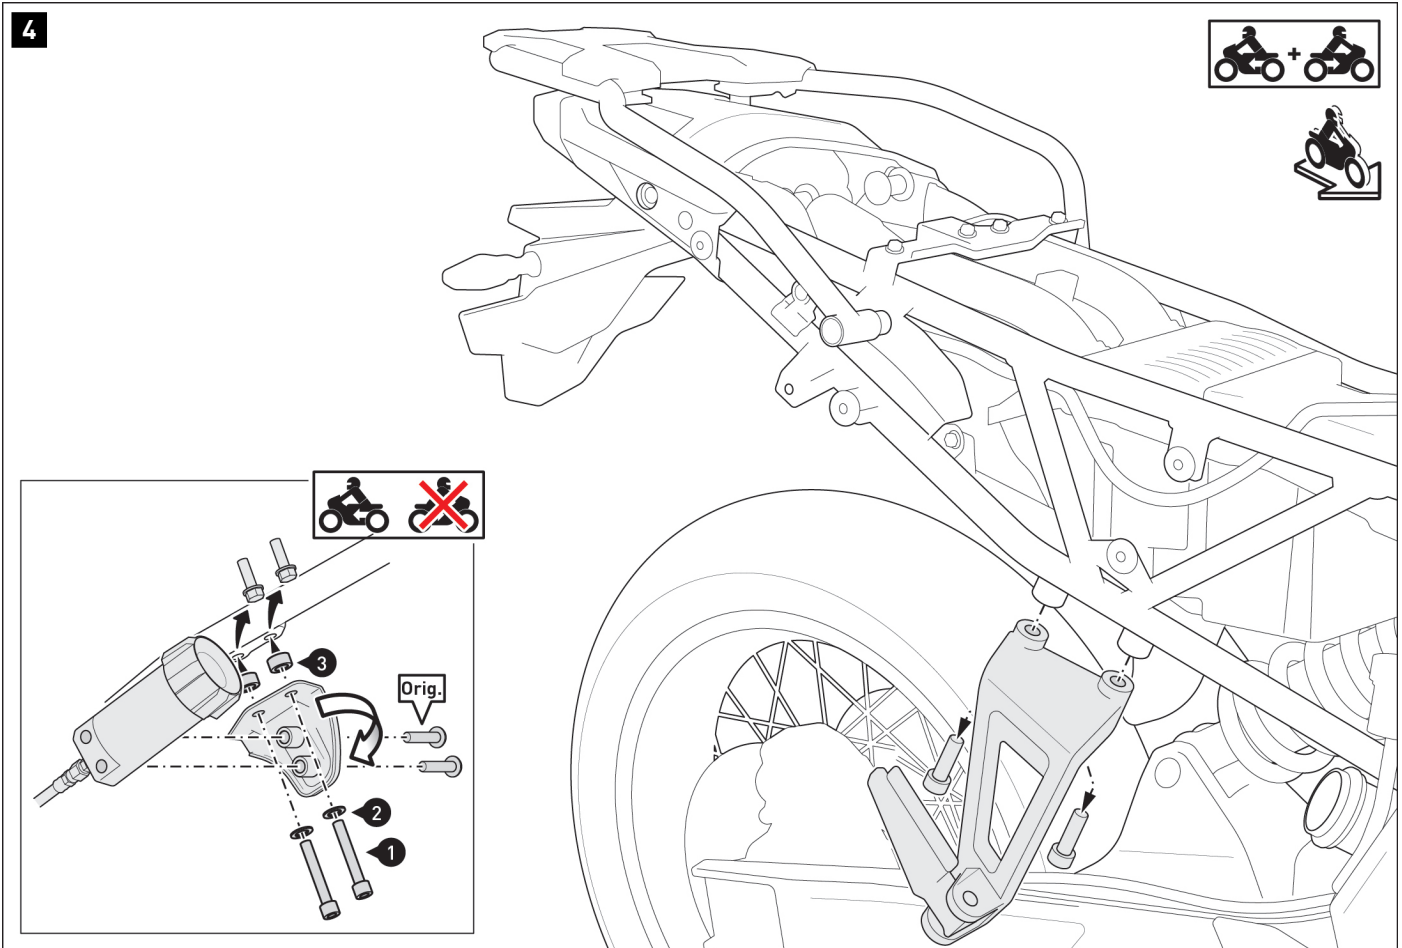

Loosen the indicated screws on **both sides** and remove the passenger footrest brackets from the vehicle.


CFMOTO 1000 MT-X (25 -): Loosen the two screws for the spring preload adjuster on the **left side of vehicle**. Next, loosen the two screws for the mounting plate; turn the spring mounting plate 180° and screw it to the (1) – (3) parts shown in the detailed illustration.

▲ WARNING: Use liquid threadlocker!


Tighten the screws (1) according to the vehicle manufacturer's specifications. Now screw the spring preload adjuster to the mounting plate using the original screws (Orig.).

▲ WARNING: Use liquid threadlocker!

Tighten the screws (Orig.) according to the vehicle manufacturer's specifications.

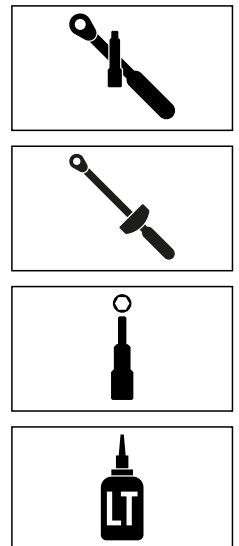



5

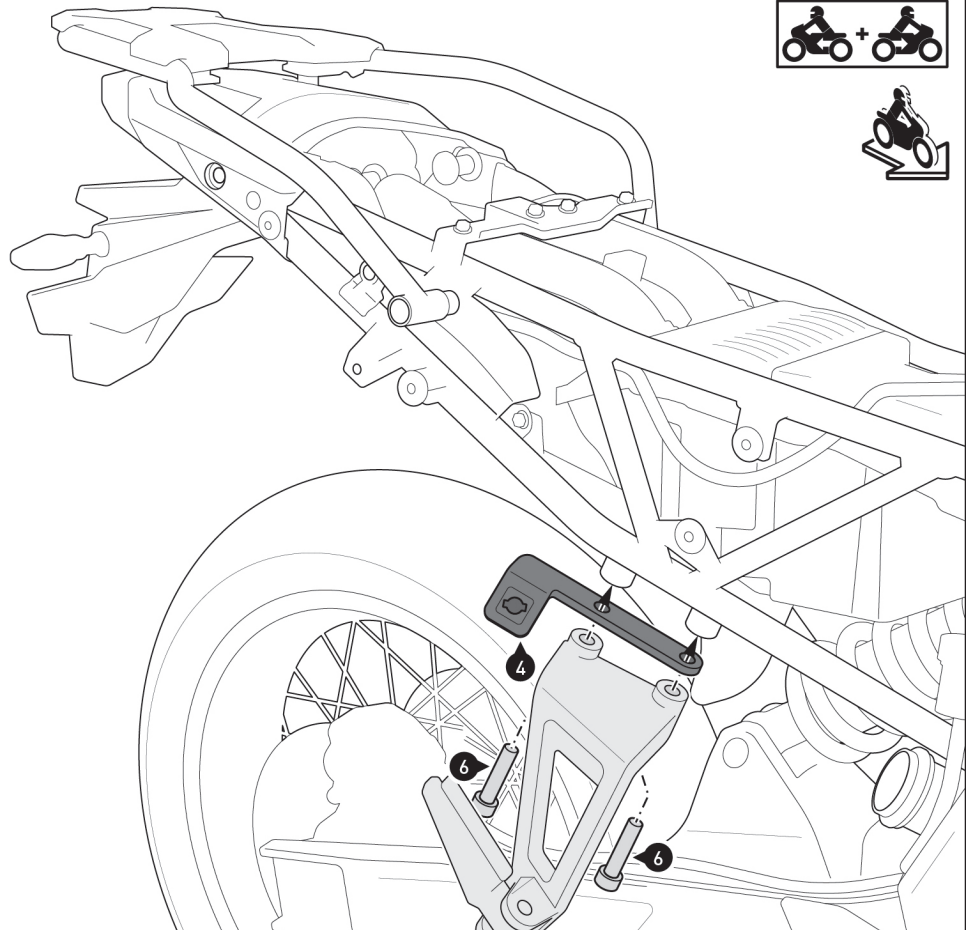


Screw fastening tabs (4/5) onto **both sides** of the vehicle.

▲ WARNING: Use liquid threadlocker!

Tighten the screws (6) according to the vehicle manufacturer's specifications.

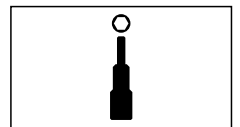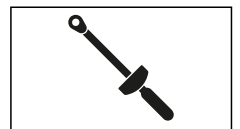

6

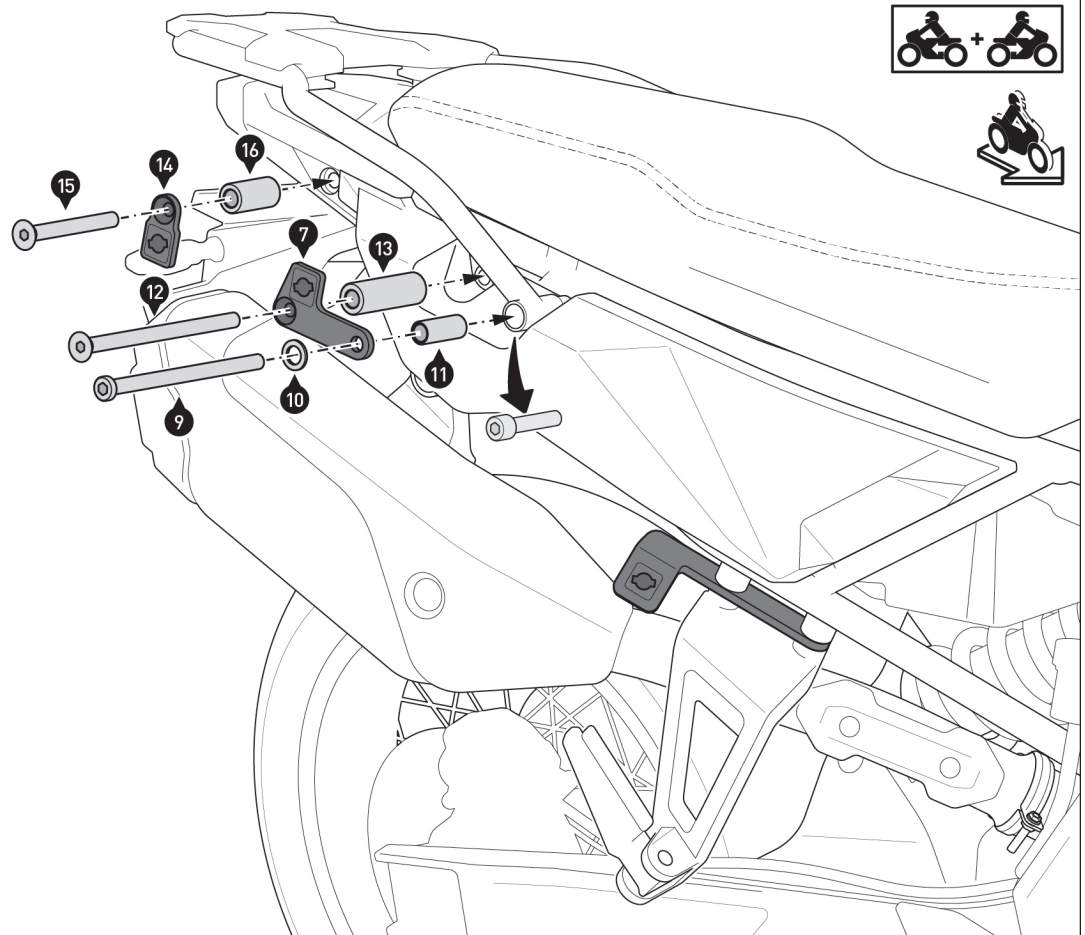



Mount any original parts dismantled in **steps [1] and [2]** back onto the vehicle in reverse order and in compliance with the vehicle manufacturer's specifications.

Screw fastening tabs (7/8) and (14) **onto both sides** of the vehicle.

▲ WARNING: Use liquid threadlocker!

Do not tighten screws (9), (12) and (15) yet.




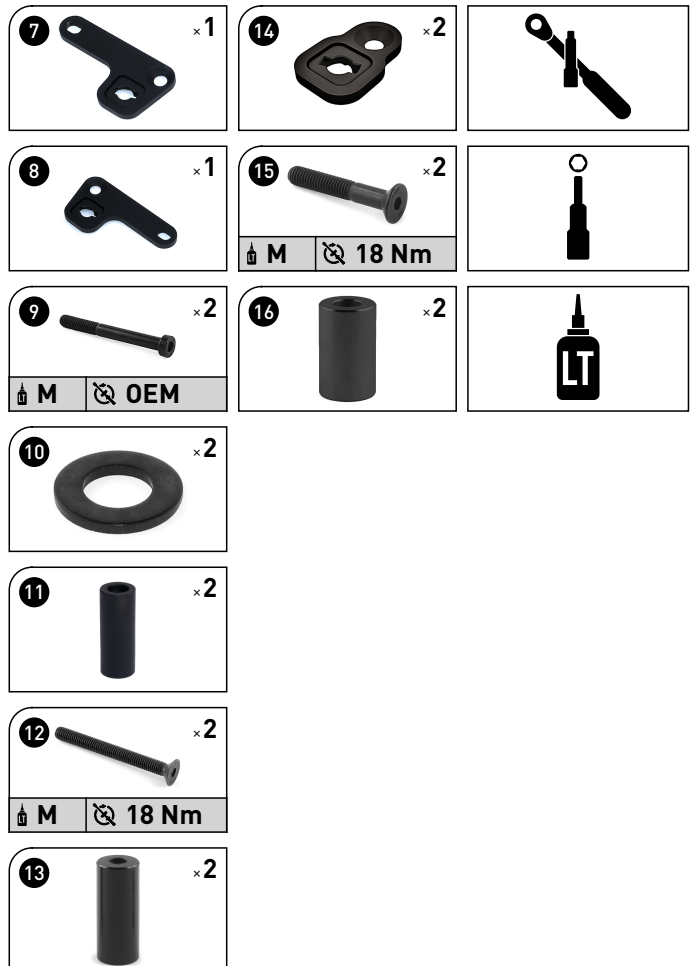


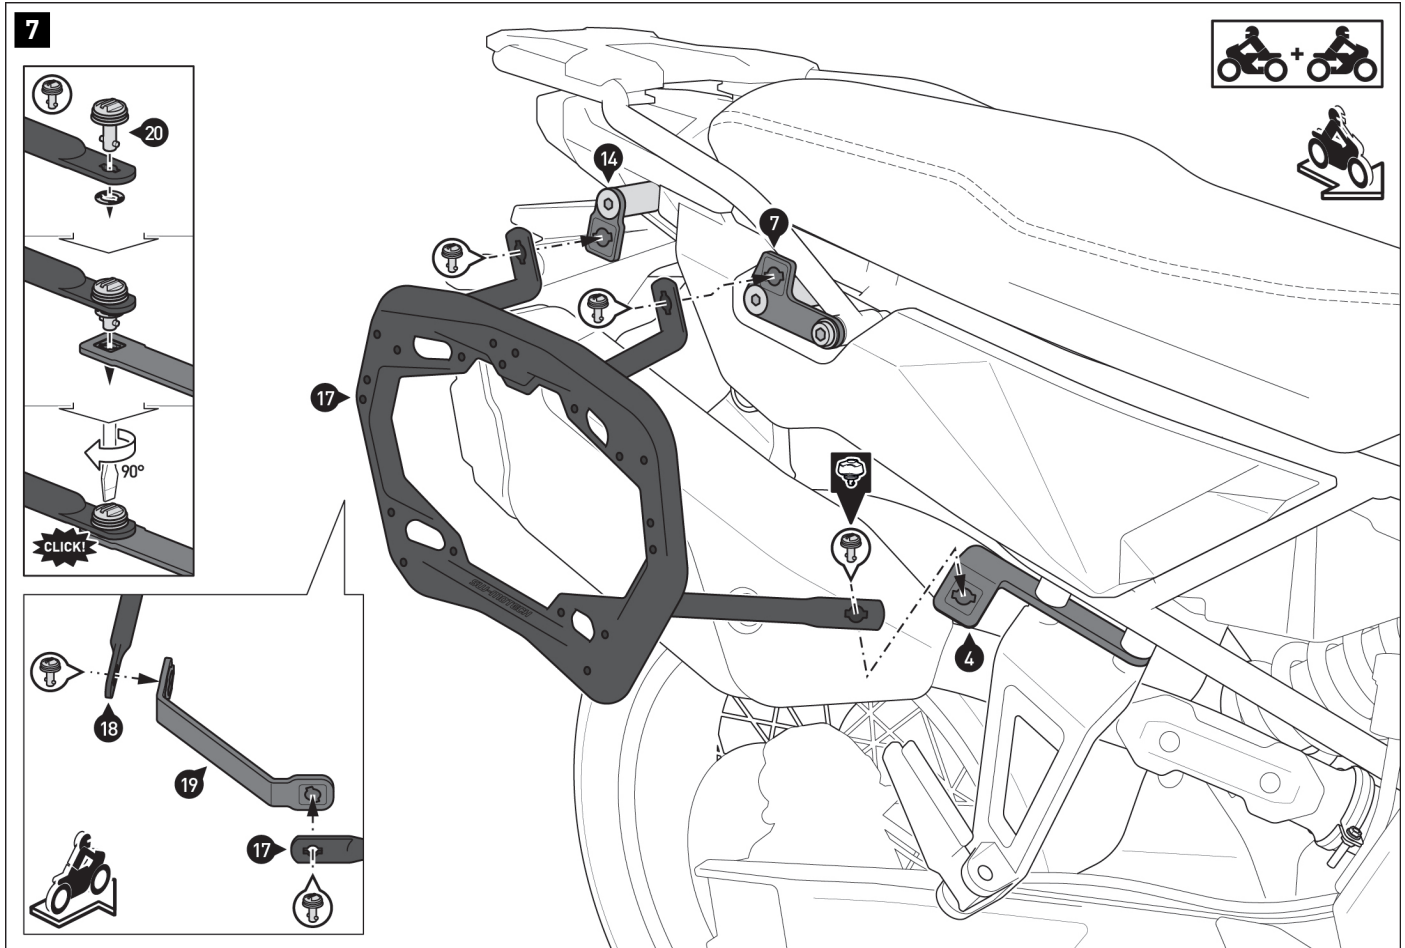

⚠ **NOTE:** SW-MOTECH anti-theft protection is sold separately; mount the anti-theft protection onto **both sides** of the vehicle as indicated.

⚠ **NOTE:** Secure all quick-release fasteners (20) using the locking washers provided.
Connect the side carriers (17/18) on **both sides** to mounting tabs (20), (4/5) and (7/8) using the quick-release fasteners (14).
Connect the side carriers (17/18) with the crossbar (19).

Once all components have been loosely attached, tighten the (9) screws according to the vehicle manufacturer's specifications.
Tighten screws (12) and (15) as specified in the mounting instructions.

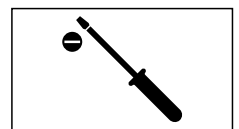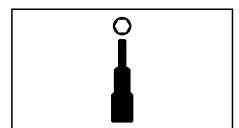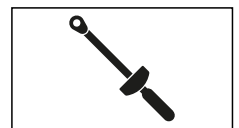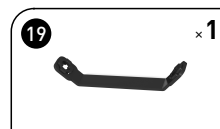

PRODUCT-SPECIFIC NOTES

⚠ DANGER: The specified maximum load includes the weight of the suitcase/luggage and adapter kit. The maximum load of the vehicle specified by the vehicle manufacturer applies.

 ≤ 12.5KG (≤ 27.5 lbs)  ≤ 130 km/h (≤ 80 mph)

⚠ NOTE: The side carriers were designed exclusively for use with SW-MOTECH adapter kits.

⚠ NOTE: Remove the side carriers when riding without luggage. Always use the side carriers in pairs.

⚠ WARNING: Make sure that the cases are NOT in the exhaust gas stream after mounting them on the vehicle. Risk of burns!

⚠ NOTE: Observe all country-specific regulations for the registration and operation of your vehicle as well as any applicable TÜV regulations. Have any parts requiring registration entered into your vehicle documents by your local inspection authority after they have been installed.